peerless®

Installation and Assembly:
LG M3800 JACK PACK COVER

Model: DS248

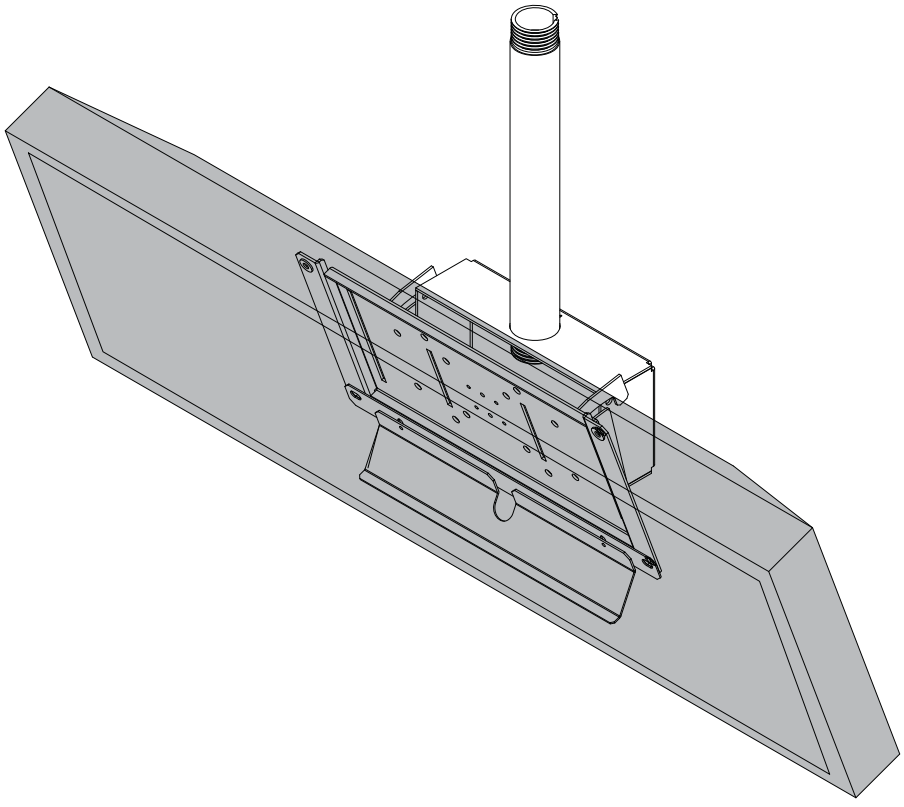

Max Load Capacity: 100 lb (45.4 kg)

3215 W. North Ave. • Melrose Park, IL 60160 • (800) 729-0307 or (708) 865-8870 • Fax: (708) 865-2941 • www.peerlessmounts.com

ISSUED: 02-20-09 SHEET #: 202-9326-1

Before you start make sure all parts listed are included with your product.

PARTS LIST

	Description	Qty.	Part #
A	jack pack cover	1	201-1654
B	retainer bracket	1	201-1656
C	4 mm allen wrench	1	560-9646
D	1/4" x .062 washer	2	540-9440
E	M5 x 10mm socket pin serrated washer head screw	2	510-1126
F	pollyester mesh sleeve	1	600-1014

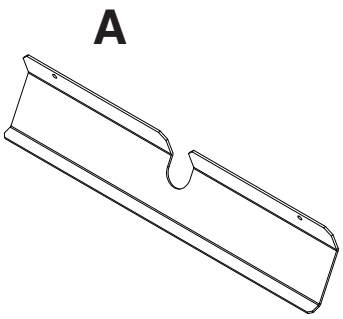

Some parts may appear slightly different than illustrated.

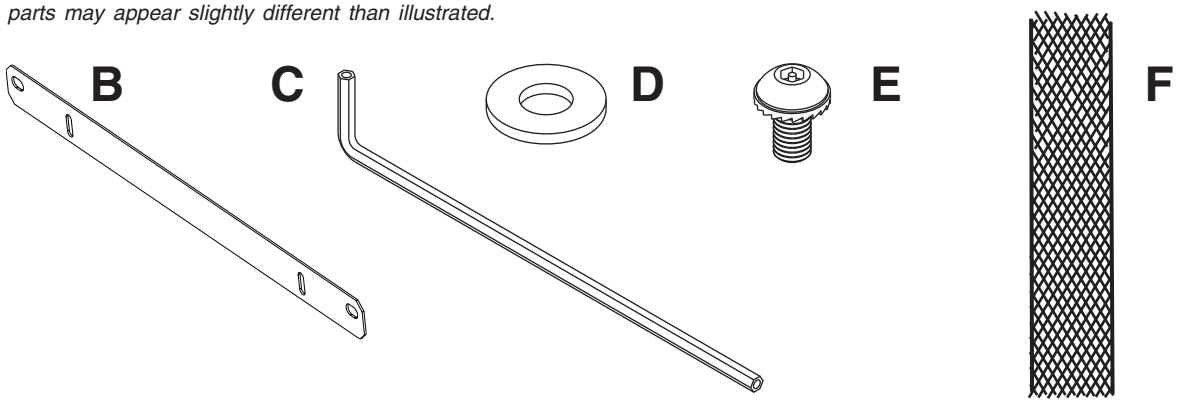

Required Accessories:

- PLCM-2
- PLP-V4X2
- ADJ or EXT Column series

Attaching Adapter Bracket to Screen

1 Attach adapter brackets to back of plasma screen using screws provided, two 1/4" x .062 washers (**D**) and retainer bracket (**B**).

Note: Use instructions provided in PLCM-2 to assemble column and PLP adapter plate.

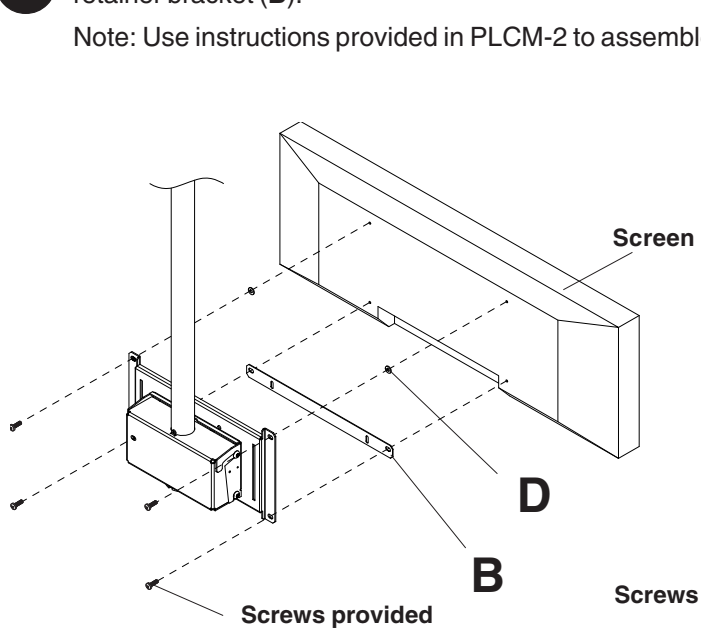

Landscape Option

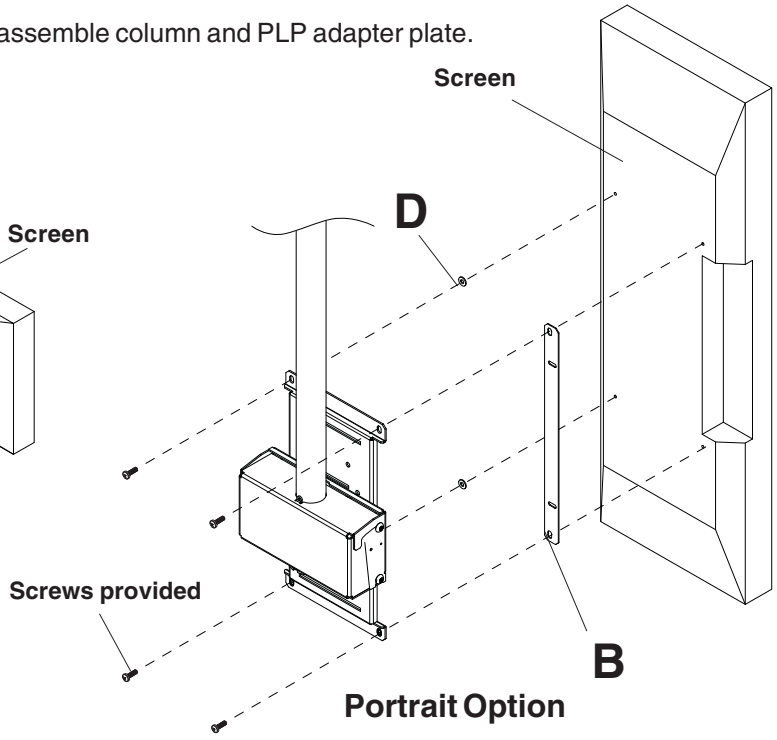

Portrait Option

2 Slide polyester mesh sleeve (**F**) over screen cables. connect screen cables.

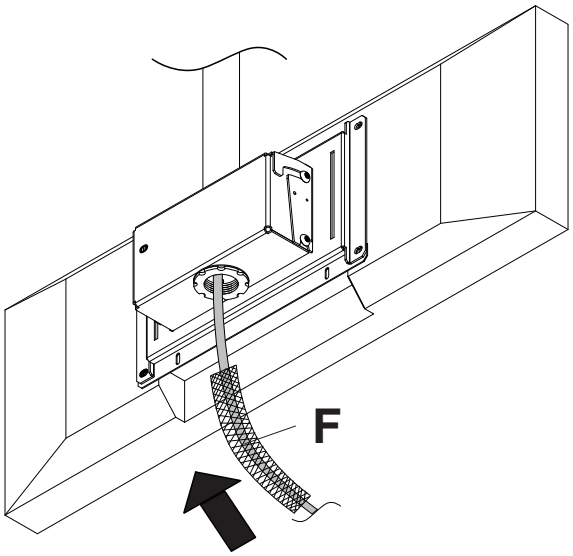

Landscape Option

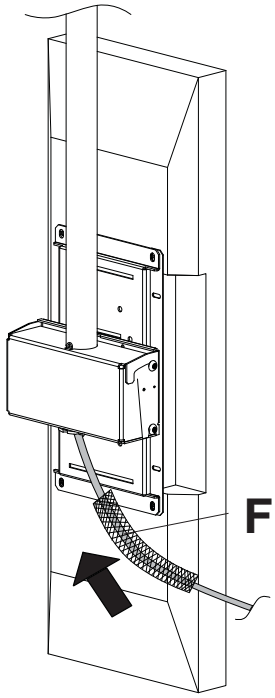

Portrait Option

3 Slide Jack Pack Cover under retainer bracket (**B**) to screen making sure that polyester mesh sleeve (**F**) and cables are in slot on Jack Pack cover (**A**), and secure using two M5 x 10 mm socket pin serrated washer head screws (**E**) as shown below and on page 4.

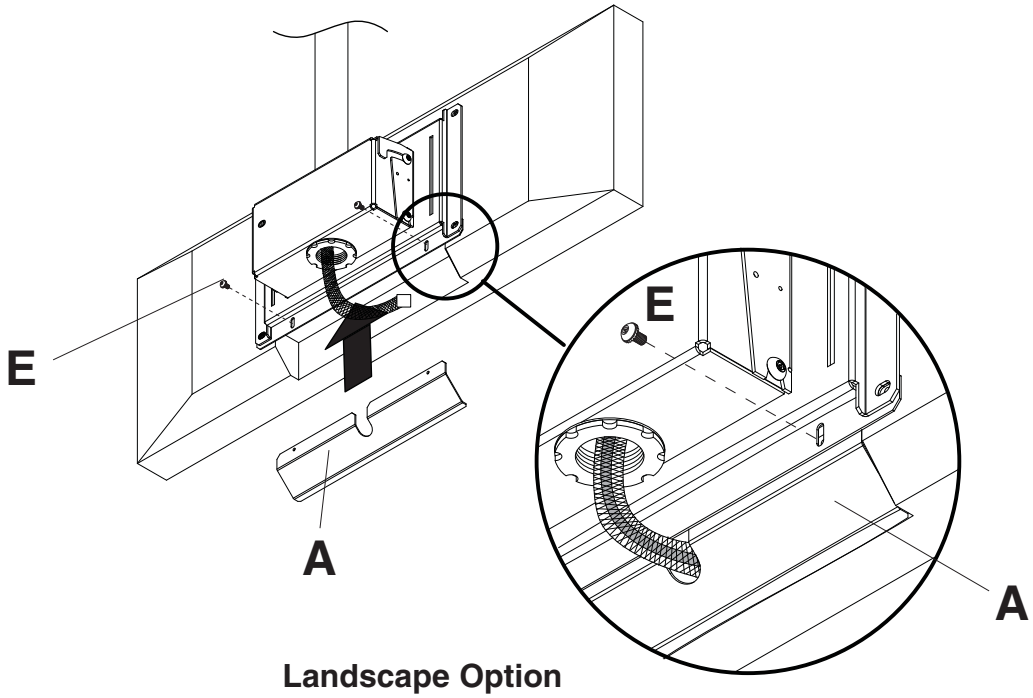

Landscape Option

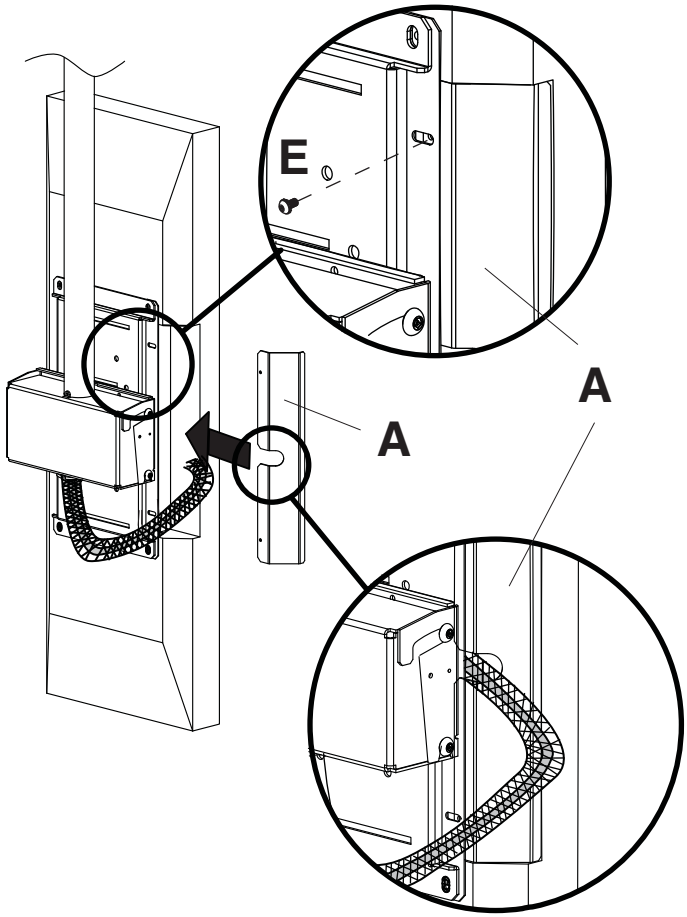

Portrait Option